

CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAUTION:-THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE

THIS APPLIANCE MUST BE FIXED OUT OF REACH OF A PERSON TAKING A WITHOUT SUPERVISION CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN



TO USE

MOUNTING INSTRUCTIONS

OF AT LEAST 3mm.

CARE SHOULD BE TAKEN THAT SINGLE INSULATED CONDUCTORS CANNOT COME INTO CONTACT WITH THE MOUNTING SURFACE.

THIS HAND DRYER MUST BE FIXED OUT OF REACH OF A PERSON TAKING A BATH OR SHOWER

TO THE SUPPLY WITH A DOUBLE POLE ISOLATING SWITCH HAVING A CONTACT SEPARATION ALWAYS ENSURE THAT THE INSTALLATION CONFORMS TO THE CURRENT EDITION OF THE IEE WIRING REGULATIONS, BS7671(UK) OR THE APPROPRIATE STANDARDS IN YOUR COUNTRY.

ENSURE THAT THE UNIT IS SEPARATELY FUSED WITH A SUITABLY RATED FUSE AND THAT IT IS CONNECTED

INSTALLATION INSTRUCTIONS

- THE HAND DRYER WILL
- FROM THE DRYER
- THE DRYER WILL STOP AUTOMATICALLY





C10 - 1000W Rating:-220-240V~ 50Hz, Class I, IP22

PO. BOX 1285 RH10 0LY C20HD, C20SS:- 1800W C15, C15HD, C15/S:- 1250W

- PLACE HANDS UNDER HAND DRYER.
- AUTOMATICALLY START.
 ONCE DRY REMOVE HANDS

 
a) 1.5 METRES ABOVE FLOOR FOR NORMAL USE
b) 1.3 METRES ABOVE FLOOR WHERE AVERAGE AGE OF USER IS BELOW 16 YEARS THIS HAND DRYER MUST NOT BE MOUNTED ABOVE SHELVES, SINKS OR RADIATORS TO ENSURE EASE OF INSTALLATION AND SUBSEQUENT MAINTENANCE, THE HORIZON

THE HORIZONTAL DISTANCE TO

RECOMMENDED FIXING HEIGHTS TO TOP OF UNIT ARE AS FOLLOWS:-

UNIT MUST BE FIXED TO A SOLID SUPPORTING WALL. SEE OVERLEAF FOR MOUNTING HOLE TEMPLATE.





AFTER INSTALLATION OR SERVICING, UNITS MUST BE CHECKED, AND ONLY LEFT WHEN ELECTRICALLY AND MECHANICALLY SAFE

ANY ADJACENT WALL SHOULD NOT BE LESS THAT 0.2 METRES

When ordering replacement modules always quote SERIAL NO., MODEL/SERIES, ELECTRICAL SUPPLY VOLTAGE AND FREQUENCY.

SERVICING THE HAND DRYER

ISOLATE THE UNIT FROM THE ELECTRICITY SUPPLY BEFORE SERVICING. REMOVE DUST, FLUFF AND ANY OTHER BUILD UP OF FOREIGN MATTER FROM INLET AND OUTLET GRILLE AREAS THE MINIMUM SERVICE PERIOD FOR THE DRYER SHOULD BE EVERY 3 MONTHS OR MORE FREQUEN INTERVALS AS EXPERIENCE DICTATES

WARNING : BEFORE OBTAINING ACCESS TO TERMINALS, ALL SUPPLY CIRCUITS MUST BE DISCONNECTED.



Correct Disposal of this product

for environmental safe recycling resources. To return your used device, please use responsibly to promote the sustainable reuse of material health from uncontrolled waste disposal, recycle it disposed with other household wastes throughout the EU the product was purchased. They can take this product return and collection systems or contact the retailer wher To prevent possible harm to the environment or human This marking indicates that this product should not be

Guarantee

materials or workmanship The hand dryer is Guaranteed for two years from the date of purchase against faulty


In the event of any part being found to be defective, the hand dryer will be repaired, or at the Manufacturers option replaced, without charge, provided that the hand dryer:
a) has been installed and used in accordance with the instructions given with each

b) has not been connected to an unsuitable electrical supply. (Correct electricity supply

has not been subjected to mis-use, neglect or damage requirements are stated on the units rating label,

has been properly serviced in accordance with the instructions given with each unit. has not been modified or repaired by any person not authorised by the Manufactures

guarantee excludes labour after an initial 12 month perioa

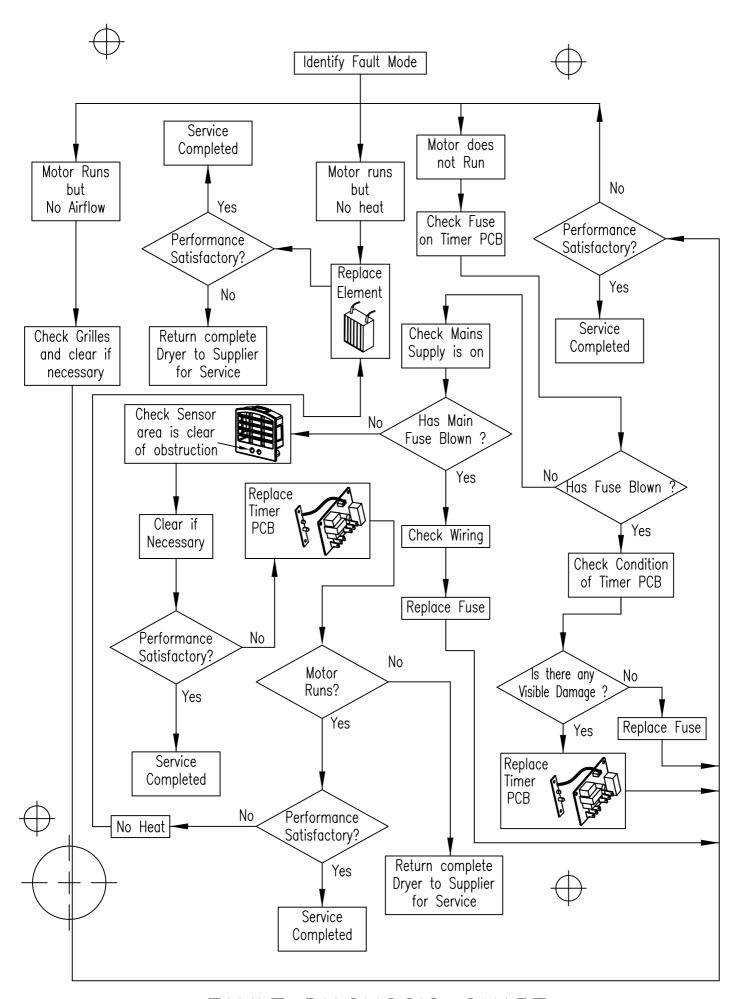

FAULT DIAGNOSIS CHART