## Sentinel Kinetic MVHR Range

Installation of the unit in the Opposite Orientation (LH Condensate)





Vent-Axia

If the orientation of the condensate exit (and the atmosphere spigots) would be better suited on the left of the unit, the front Control Unit and the rear Cable Inlet Plate can be swapped over to allow the unit to be installed in the opposite orientation.

## Installing the Unit in the Opposite Orientation (LH Condensate)

Installing the unit in the opposite orientation involves removing the front cover (and associated Control Unit Panel), and the rear cover (and associated Cable Inlet Plate), rotating the unit chassis and covers through 180 degrees and then re-attaching them.

This moves the condensate drain exit from the right (rear) corner of the unit to the left (front) corner of the unit, when viewed from the front (viewing the Control Unit).



Figure 1: Installing the Unit in the Opposite Orientation

Remove the front and rear covers by unscrewing the) fixing screws on both covers (see *Figure1*).

Six screws for the Kinetic.

Eight screws for the Kinetic Plus

Remove the 2 screws and detach the Electrical Cover from the front of the unit (see *Figure 2*).



Figure 2: Detaching the Electrical Cover (Front of Unit)

Remove the 2 screws and detach the Control Panel and disconnect the mains lead.

Disconnect the ribbon cable (see

(see Figure 3).

Figure 4).



Figure 3: Detaching the Control Panel (Front of Unit)



Figure 4: Disconnecting the Ribbon cable (Front of Unit)



, i.,

Figure 5: Disconnecting the 4-way connector (Front of Unit)



Figure 6: Removing the Cable Inlet Plate (Rear of Unit)

Re-attach the Cable Inlet Plate on the opposite side of the unit.

Disconnect the 4-way connector (see Figure 5).

Remove the 2 screws and detach the rear Cable Inlet Plate (see Figure

6).

Fit the Control Panel on the opposite side of the unit. Taking care to reconnect the ribbon cable and internal 4-way connector to the control panel before securing the panel to the unit.

## Note: Cable ribbon connector is polarised to ensure correct fitting.

Re-connect the mains cable: L, N, E,LS.

Re-attach the Electrical Cover.

Re-attach the front and rear covers off the unit.

Note: When the unit is converted from RH to LH the blue Vent-Axia logo will then be facing the wall.





Head Office: Fleming Way, Crawley, West Sussex, RH10 9YX.

UK NATIONAL CALL CENTRE	, Newton Road, Crawley, V	West Sussex, RH10 9JA
SALES ENQUIRIES:	Tel: 0344 8560590	Fax: 01293 565169
TECHNICAL SUPPORT	Tel: 0344 8560594	Fax: 01293 532814

For details of the warranty and returns procedure please refer to www.vent-axia or write to Vent-Axia Ltd, Fleming Way, Crawley, RH10 9YX

© 2016 Vent-Axia Limited. All rights reserved.