


WIRING DIAGRAM - 4


For use with:
Optional switch required
 for:
 SOLO SELV 12
 VA100SVL 12
 VA100SVX 12

Optional switch not required for:
 LOWATT SOLO P
 VA100SVLH 12
 VA100SVXH 12

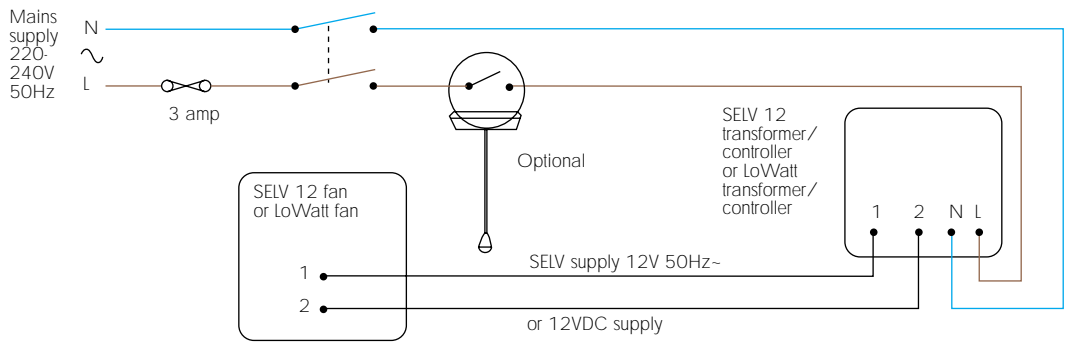


WIRING DIAGRAM - 5

For use with:
 SOLO SELV 12T
 VA100SVXT 12
 LOWATT SOLO T

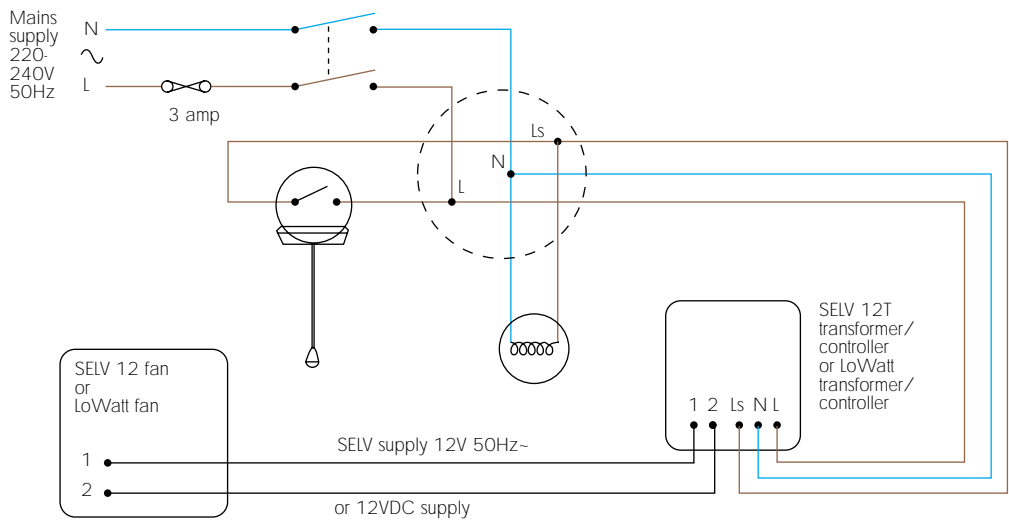

WIRING DIAGRAM - 6


For use with:
 SOLO SELV 12H

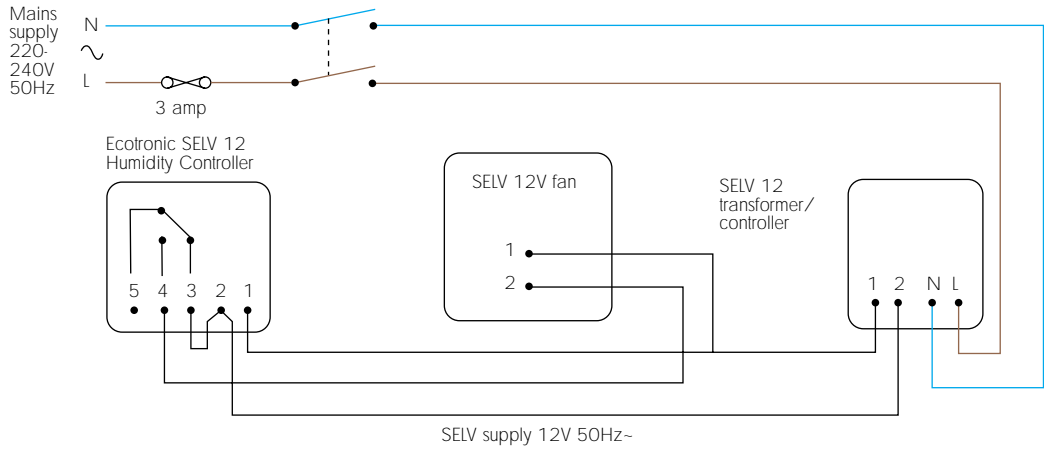

WIRING DIAGRAM - 7

For use with:
SOLO SELV 12DP


HIGH SPEED

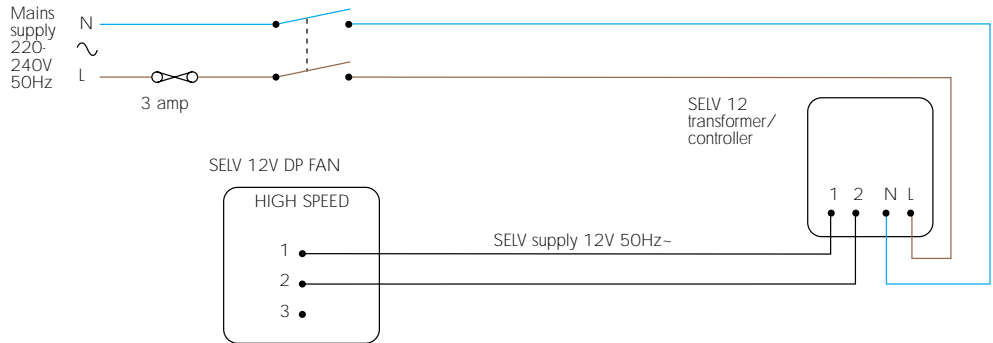

WIRING DIAGRAM - 8


For use with:
SOLO SELV 12DP

LOW SPEED

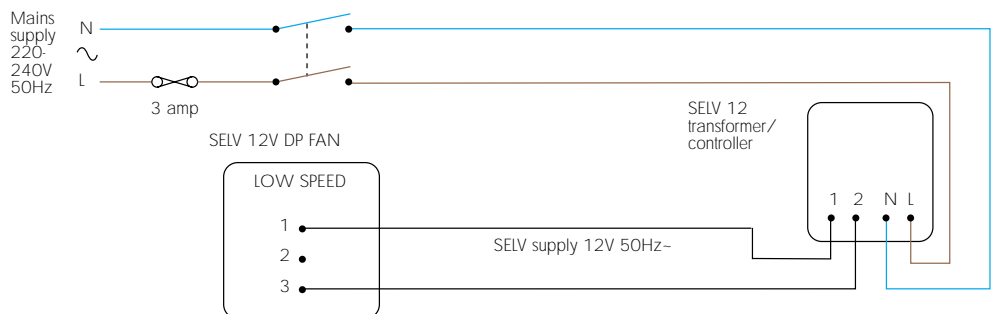

WIRING DIAGRAM - 9

For use with:
SOLO SELV 12DP

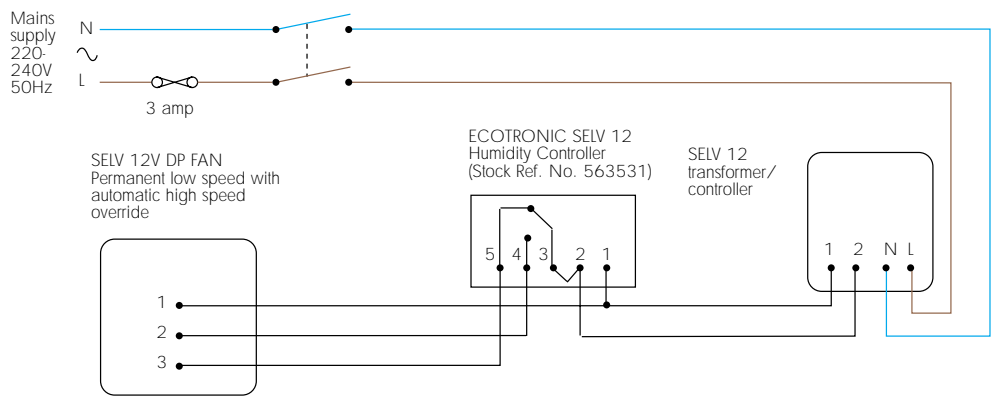

WIRING DIAGRAM - 10

For use with:
SOLO SELV 12DP

