


Vent-Axia®

TWIN FAN CONTROLLER

Installation and Wiring Instructions

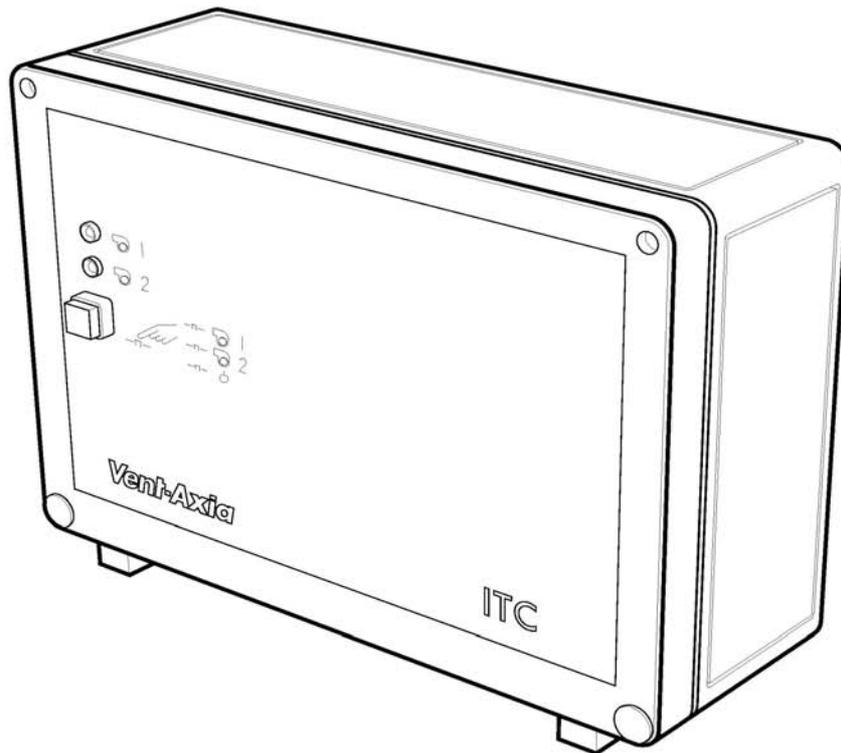

Models:- ITC and ITC-DS

Maximum load : 220-240V 50Hz ~ 9A and 380-415V 50Hz 3 ~ 9A

IMPORTANT - READ THESE INSTRUCTIONS FULLY BEFORE COMMENCING INSTALLATION.

1. Ensure that the mains supply voltage, frequency, number of phases and power rating comply with the details on the rating label. Check that the controller can cope with the load (including starting current).
2. All wiring must be in accordance with current I.E.E. wiring regulations (BS7671), or the appropriate standards in your country. The equipment should be provided with a local all pole isolator switch having a contact separation of at least 3mm. We recommend that wiring to the equipment be made in conduit for added protection.
3. This equipment must be earthed.
4. Ensure safety regulations and practices are adhered to when installing and using this equipment.
5. The controller must not be used where it is liable to be subjected to water spray from hoses, etc., or where the ambient air temperatures may exceed 40°C.
6. When the fan motor thermal protector terminals (TK or TP) are brought out externally, they **MUST** be connected to the relevant controller terminals.

FOREWORD

The Vent Axia twin fan controller range comprise of the following modules;

1. **ITC** Basic twin fan controller.
2. **ITC-DS** Twin fan controller with 12/24 hr duty sharing.
3. **RVC** Remote visual controller
4. **RSC** Remote setback controller

Both the **ITC** and **ITC-DS** controllers have the following features;

- a. control both single and three phase fans if thermal overloads are fitted to the motors.
- b. fan failure indication to Building Management System (BMS) via voltage-free contacts.
- c. connection to external sensors (sensors must have voltage-free contacts).
- d. fan can be speed controlled using only one speed controller.

The **RVC** module is used to indicate the status and to select the operation of the fans remotely (up to 100m away). Connections to the **ITC** and **ITC-DS** are Extra Low Voltage data link.

The **RSC** is used to change the power supply to the fans (eg. switching between the mains supply and a speed controller). The selection of power supply can be achieved by any sensors or timers with voltage-free contacts. Connections between the RSC and the sensor are Extra Low Voltage. Contact your local Vent-Axia distributor for a full list of compatible sensors.

MOUNTING

1. Install the controller in a ventilated area.

ITC and **ITC-DS** can be fitted locally to the fans to reduced wiring cost and are rated to IP44. In this setup, **RVC** should be used to indicate the status of the system at a remote location.

2. If the controller is mounted on metal or other conductive surface; that surface **MUST** be earthed.

3. Open the lid to gain access to the fixing holes. Securely mount the controller to the surface using appropriate fasteners. Route the supply and outlet cables through 'knock-out' holes in the casing.

OPERATING STATUS

The ITC and ITC-DS has 2 LED's to indicate which fan is operating and a pushbutton to select either fan 1, fan 2 or standby mode.

The relay contacts for BMS indications are used to indicate the following conditions:


<i>contacts#1</i>	<i>contacts#2</i>	<i>system condition</i>
closed	closed	system OK
opened	closed	fan 1 failed
closed	opened	fan 2 failed
opened	opened	both fans failed or power failure

FUSES


The electronic circuit is protected by a 20mm long 1A time-lag (type T) fuse.
The 24AC output is protected by a 20mm long 500mA time-lag (type T) fuse.

SUPPLY CONNECTIONS


SINGLE PHASE FANS
TO 220-240V ~ 50Hz SUPPLY

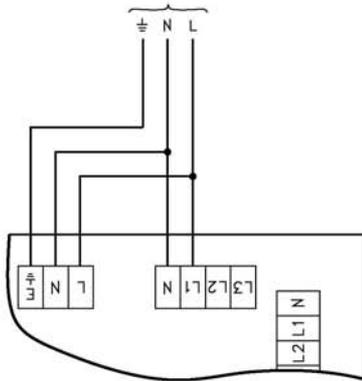

3 PHASE FANS
TO 380-415V 3~ 50Hz SUPPLY

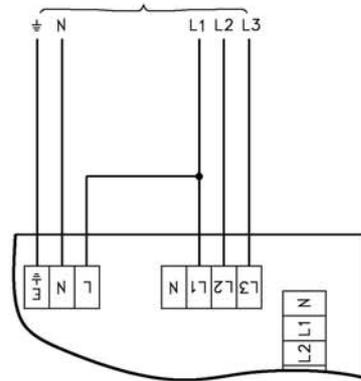


SINGLE PHASE FANS
WITH SPEED CONTROLLER
TO 220-240V ~ 50Hz SUPPLY

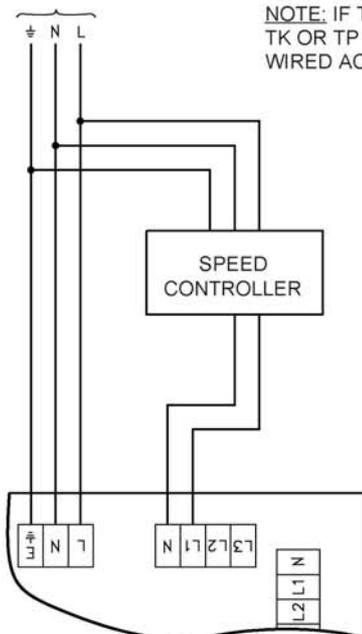


NOTE: IF THE SPEED CONTROLLERS HAVE TK OR TP TERMINALS, A LINK SHOULD BE WIRED ACROSS THESE TERMINALS.

3 PHASE FANS
WITH SPEED CONTROLLER
TO 380-415V 3~ 50Hz SUPPLY

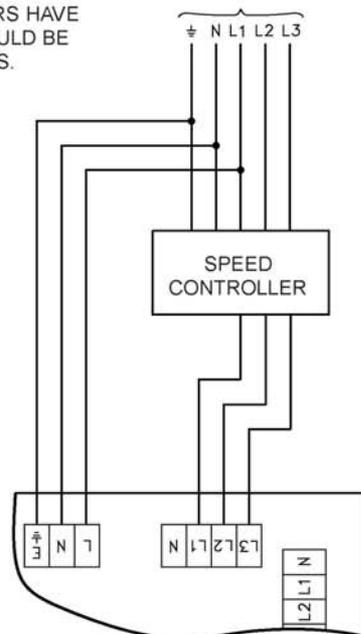


OUTLET CONNECTIONS


SINGLE PHASE FANS

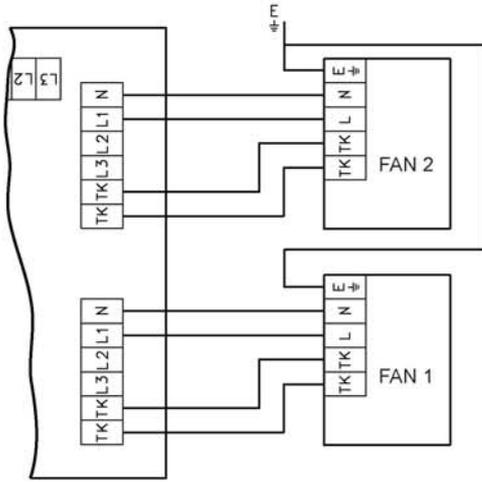

SINGLE PHASE FANS WITH INTERNALLY WIRED THERMAL OVERLOAD PROTECTION.

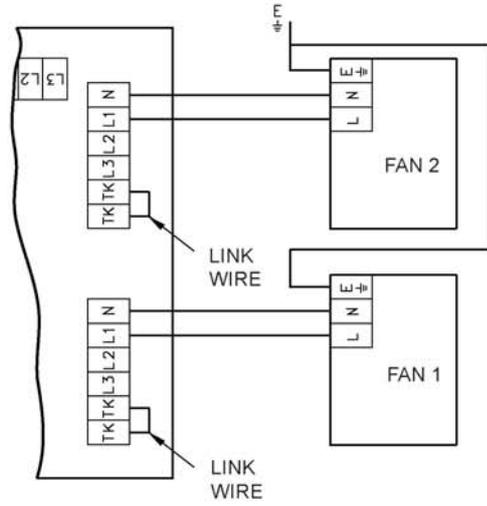


3 PHASE FANS

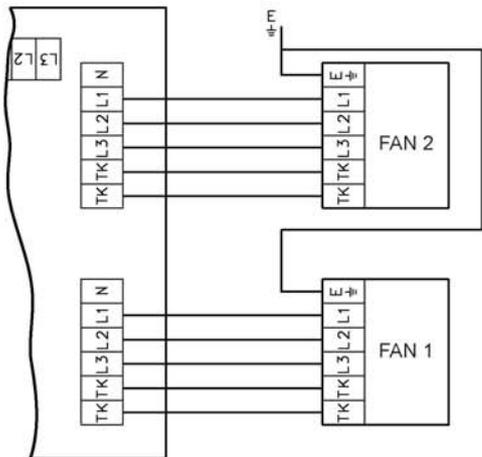

NOTE: 3 PHASE FANS MUST HAVE EXTERNALLY CONNECTED THERMAL OVERLOAD PROTECTION.

NOTE: INSTALLER MUST PROVIDE ADEQUATE EARTH BONDING TO THE FANS

RSC CONNECTIONS

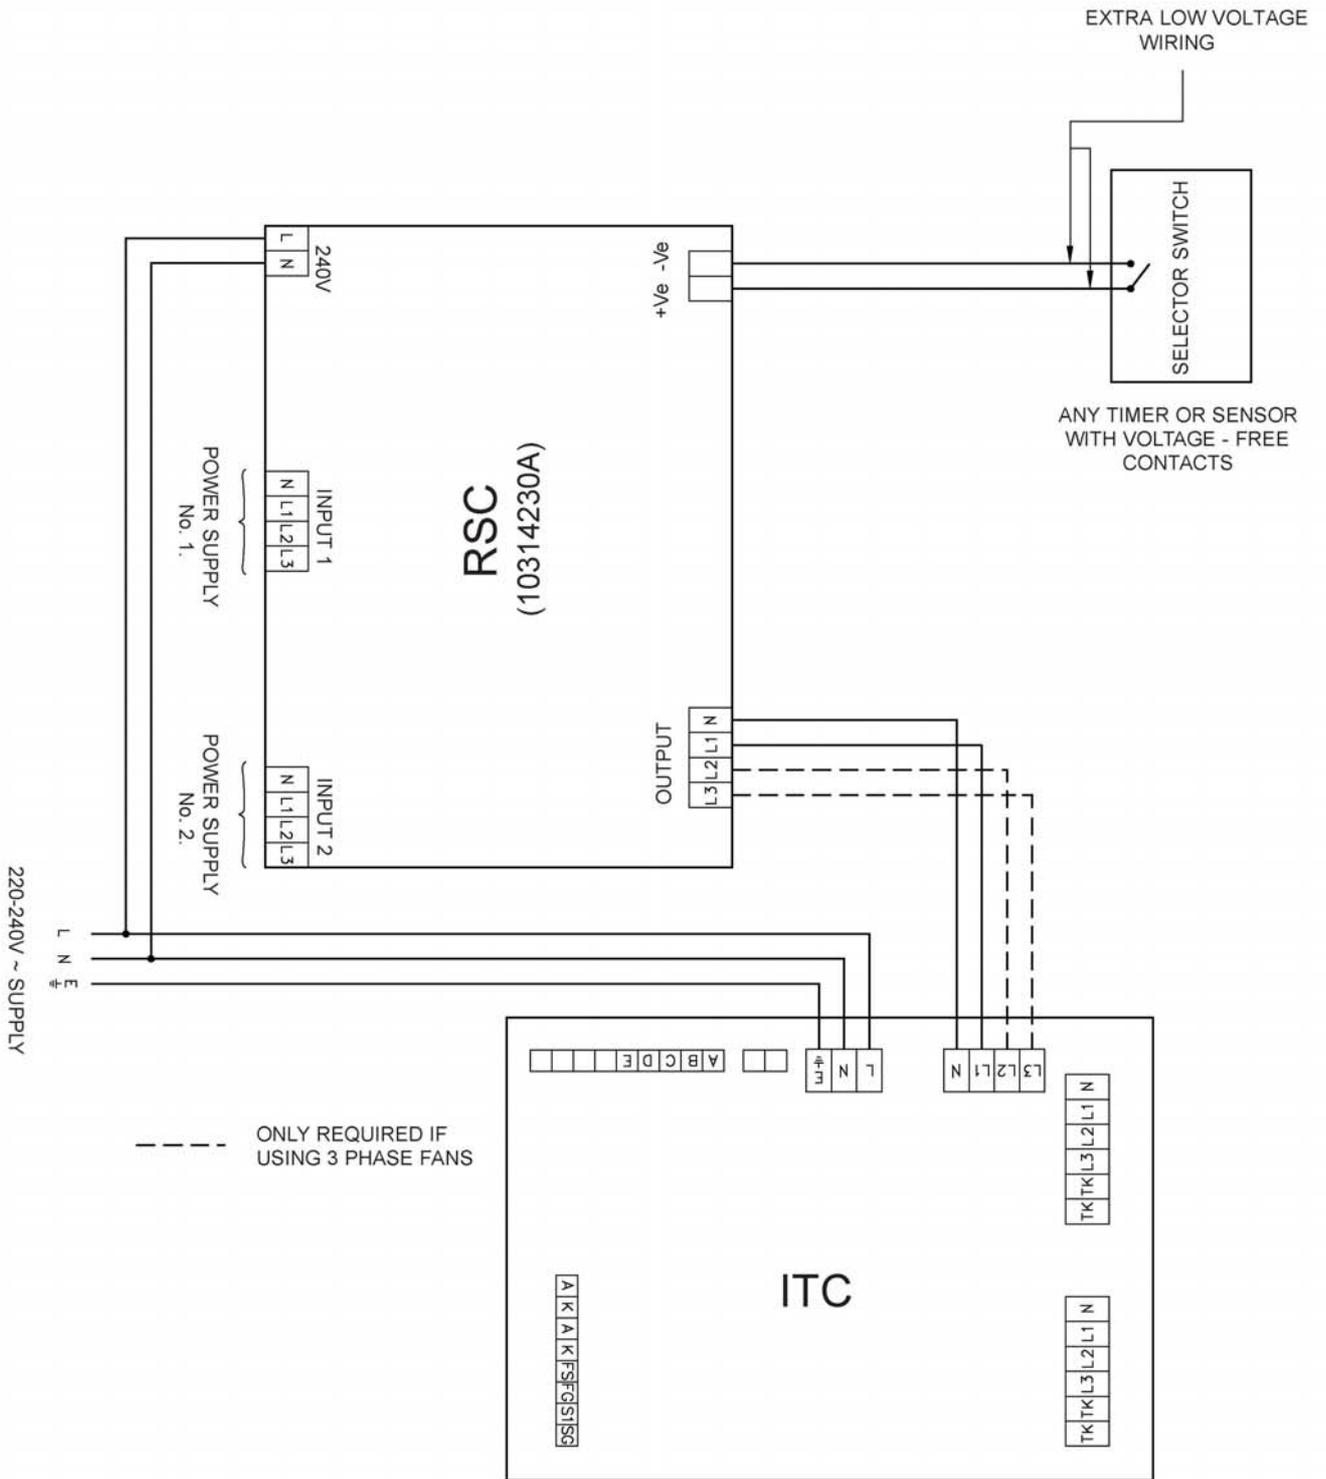

GENERAL WIRING

WARNING

- ISOLATE MAINS SUPPLY BEFORE MAKING CONNECTIONS
- THIS EQUIPMENT MUST BE EARTHED

1. All electrical connections should be made by a properly qualified electrician.
2. Wire the supply and outlet cables as shown in the wiring diagrams.
3. After making wiring connections, replace the lid onto the base and ensure the cable glands; gasket; etc. are securely located.


NOTES ON RUNNING

Both the ITC and ITC-DS operates by detecting the current flowing to the fan. If it is necessary to switch the fan on and off for any reason; e.g. fan off at night, this switching operation must be done via the ITC or ITC-DS controller by making or breaking the contacts connected across S1 - SG. Otherwise a fan failure will be registered.

Before switching on CHECK:


1. All mountings are secure.
2. Circuit protection devices are fitted.
3. Earth connections have been made and are secure.
4. The fan is installed properly and the impeller is free to rotate.
5. All relevant guards are fitted.

LAYOUT OF CONNECTIONS

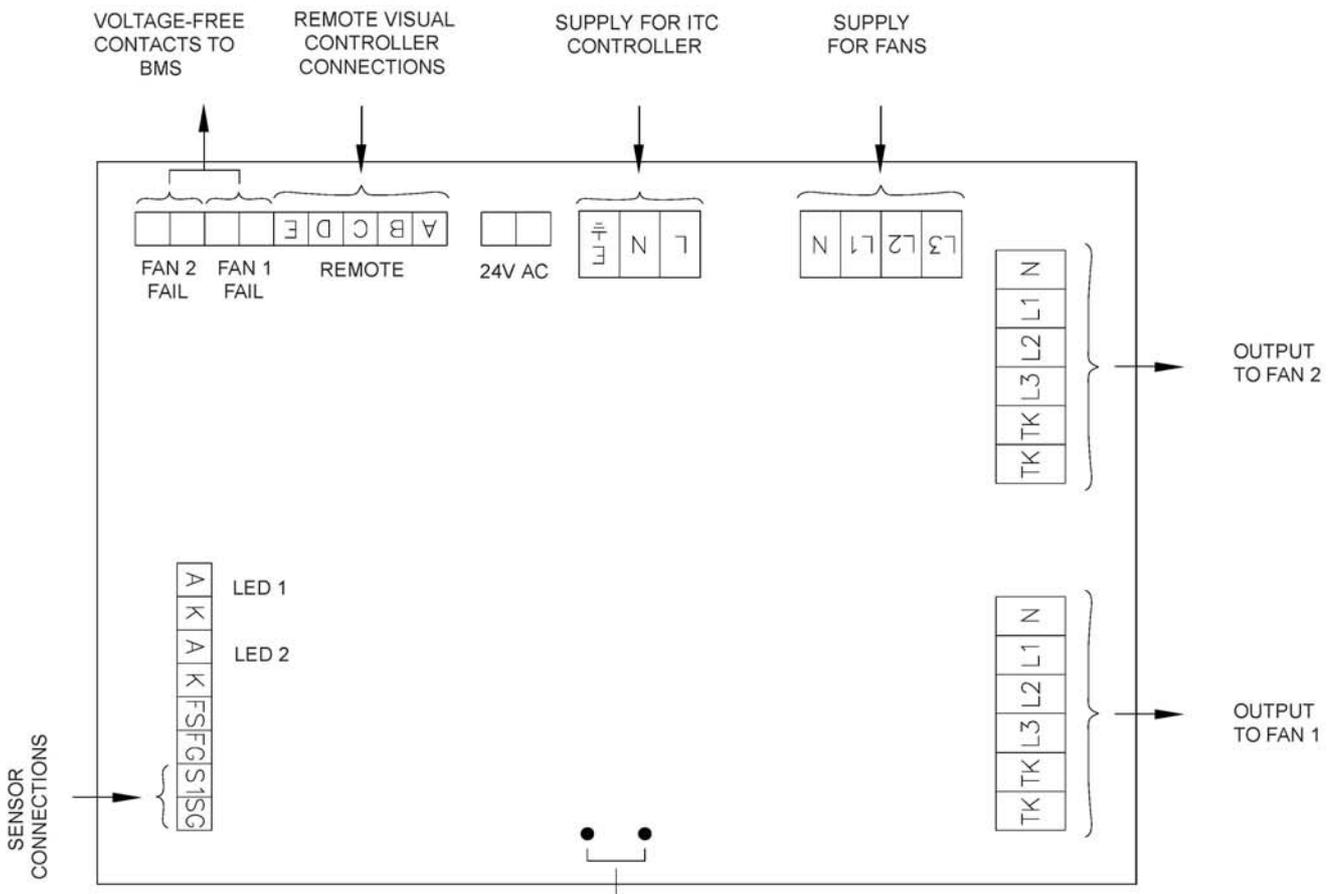


LINK TO SELECT 24HR. CHANGE OVER. MODEL ITC-DS ONLY IS INSERTED HERE
(12HR. IS SELECTED WITHOUT THE LINK IN PLACE)

RVC CONNECTIONS

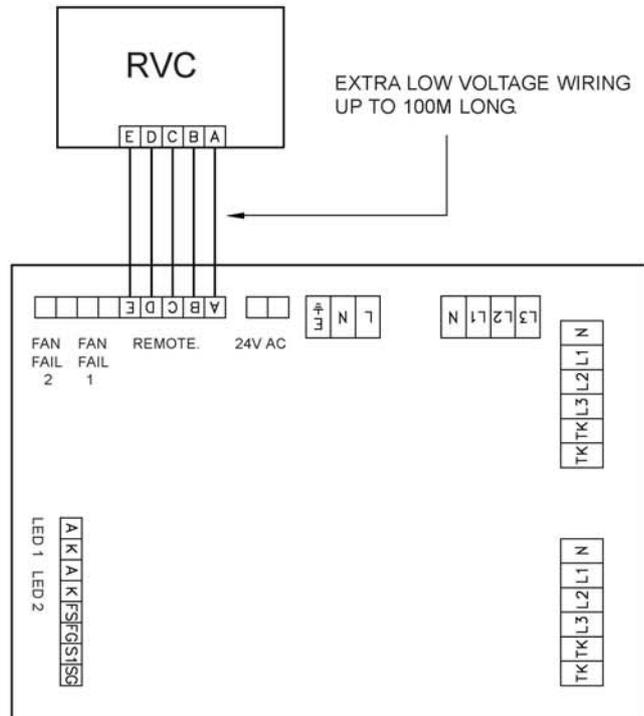

SENSOR CONNECTIONS AND BMS CONNECTIONS

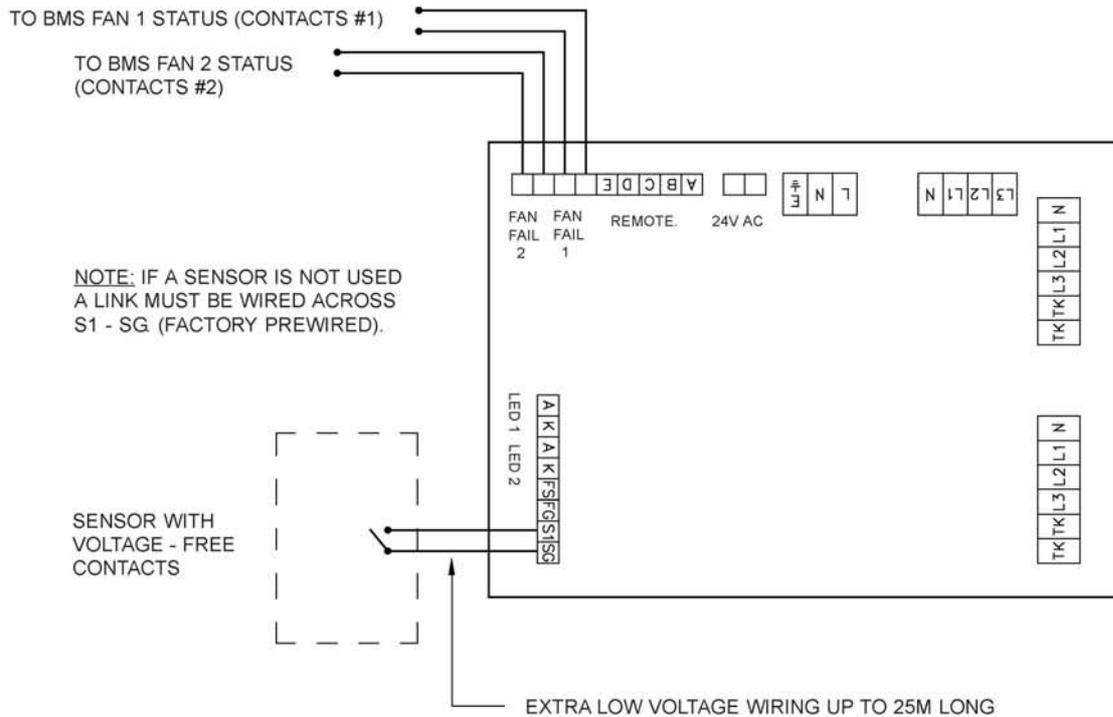

The **Vent-Axia** Guarantee

Applicable only to products installed and used in the United Kingdom. For details of guarantee outside the United Kingdom contact your local supplier.

Vent-Axia guarantees its products for two years from date of purchase against faulty material or workmanship. In the event of any part being found to be defective, the product will be repaired, or at the Company's option replaced, without charge, provided that the product:-

- Has been installed and used in accordance with the instructions given with each unit.
- Has not been connected to an unsuitable electricity supply. (The correct electricity supply voltage is shown on the product rating label attached to the unit).
- Has not been subjected to misuse, neglect or damage.
- Has not been modified or repaired by any person not authorised by the company.

IF CLAIMING UNDER TERMS OF GUARANTEE

Please return the complete product, carriage paid to your original supplier or nearest Vent-Axia Centre, by post or personal visit. Please ensure that it is adequately packed and accompanied by a letter clearly marked "Guarantee Claim" stating the nature of the fault and providing evidence of date and source of purchase.

The guarantee is offered to you as an extra benefit, and does not effect your legal rights

Vent-Axia

Head Office: Fleming Way, Crawley, West Sussex, RH10 9YX. Tel: 01293 526062 Fax: 01293 551188

UK NATIONAL CALL CENTRE, **Newton Road, Crawley, West Sussex, RH10 9JA**

SALES ENQUIRIES: Tel: 0844 8560590 Fax: 01293 565169

TECHNICAL SUPPORT: Tel: 0844 8560594 Fax: 01293 539209

Web:-www.vent-axia.com Email:- info@vent-axia.com

As part of the policy of continuous product improvement Vent-Axia reserves the right to alter specifications without notice.